


Supplemental Disc Brake Spacer Instructions (DBS1)

Thank you for purchasing FATWHEELS®. Please read these instructions thoroughly before you decide whether you should install them yourself or get help from a competent bicycle mechanic.

1. This disc brake spacer kit allows the installation of the FATWHEELS Small HD and Adult kits where a disc brake caliper is in the 9 to 12 o'clock position as viewed from the left side. Three spacers are supplied in this kit and will be located between the left main bracket and the wrap clamps. These spacers are 1/4" thick and fasten with the hardware already provided in your FATWHEELS kit. Your caliper stick out from the frame cannot exceed 3/8" for these to work correctly. Picture **A**.
2. In step 9 of your kit's instruction, you had installed the wrap clamps on the frame. Picture **B**. Starting after step 10, mount the disc brake spacer over the wrap clamp with the hook over the top of the frame. Tape the spacer to the wrap clamp to hold it in place while you position the remaining spacers. The spacer's slotted hole should align with the holes in the wrap clamp. Picture **C**.

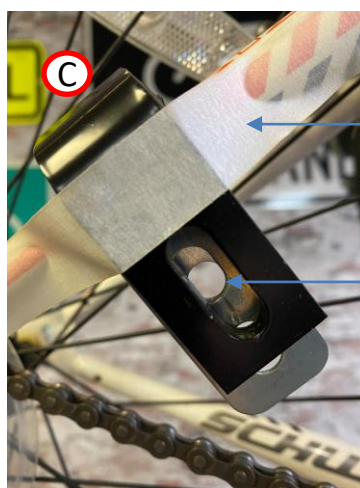

Tape

Hole
Alignment

3. Once you've placed the supplied spacers on the wrap clamps, resume from step 11 of your kit's instruction sheet

